

Installing TSG 8 QC – getting started

- You get:

- A TSG 8 QC **licence** from me (peter.mason@csiro.au)
- The TSG 8 **setup program** from:

License ID:	12345678
Activation Password:	1AB2C3DE

https://research.csiro.au/static/tsg/setup_tsg8_current_solo_WinXP.exe

- You need:

- A **memory stick**



- We begin:

- Make a note of the licence info
- Click the above link to download the setup program
- Copy the setup program to the memory stick

Installing TSG 8 QC - installation

- Install TSG 8 on the HyLogger PC:
 - Start up the HyLogger PC if necessary
 - Plug the memory stick into the HyLogger PC
 - Run the setup program from the memory stick
 - After installation, start TSG by double-clicking its desktop icon
 - TSG starts and shows its **licence dialog**
 - If this dialog doesn't show then use the Help -> Licence menu

A screenshot of the 'TSG Licence' dialog box. The dialog has a title bar with 'TSG Licence' and a close button. It contains several text input fields: 'Name' (Unlicensed), 'Company' (Unlicensed), 'License' (n/a), 'Base' (none), 'Modules' (n/a), 'Days left' (30), 'Clock left' (n/a), and 'Affiliate' (n/a). Below these fields is a section titled 'Customer License Portal' containing buttons for 'Refresh', 'Deactivate (for moving)', 'Purchase upgrade', 'Purchase new', 'Activate a purchase', and 'Close'.

Installing TSG 8 QC – licence activation request

- Click the “**Activate a Purchase**” button

Activate a purchase

- A licence activation dialog comes up

- Select “**Offline - files**”


- Enter your **Licence ID** and **Password**

- Click “**Create a request file**”

- Windows ask you to provide a filename

- Go with the default filename, but **save it to the memory stick**

- Eject the memory stick

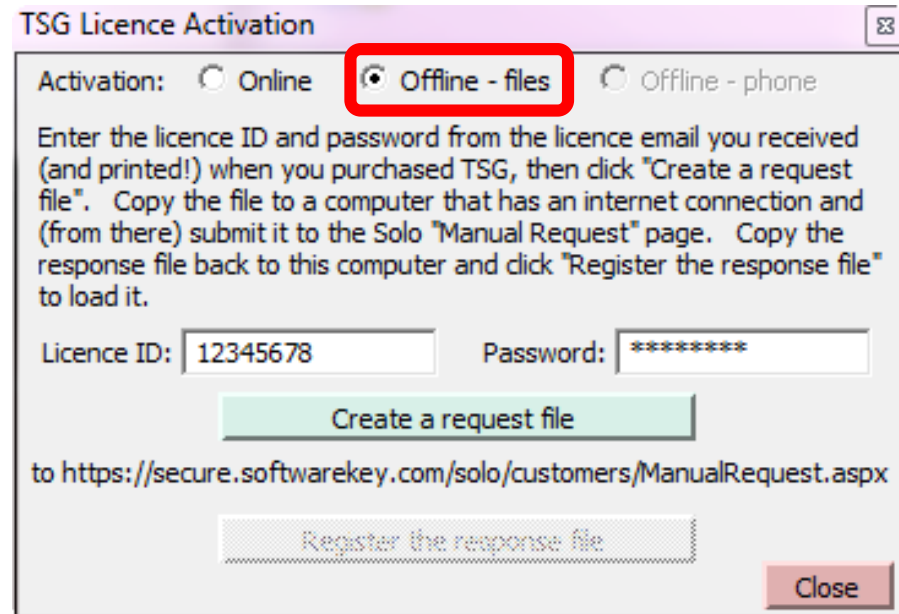

TSG Licence Activation

Activation: Online Offline - files Offline - phone

Enter the licence ID and password from the licence email you received (and printed!) when you purchased TSG, then click "Create a request file". Copy the file to a computer that has an internet connection and (from there) submit it to the Solo "Manual Request" page. Copy the response file back to this computer and click "Register the response file" to load it.

Licence ID: Password:

to <https://secure.softwarekey.com/solo/customers/ManualRequest.aspx>



Installing TSG 8 QC – licence activation response (1 / 3)


- Plug the memory stick into a networked PC
- Open your web browser to this URL:
<https://secure.softwarekey.com/solo/customers/ManualRequest.aspx>

1. Click **“Choose File”** on the right

- Select your request file on the memory stick



2. Click **“Submit”** on the right

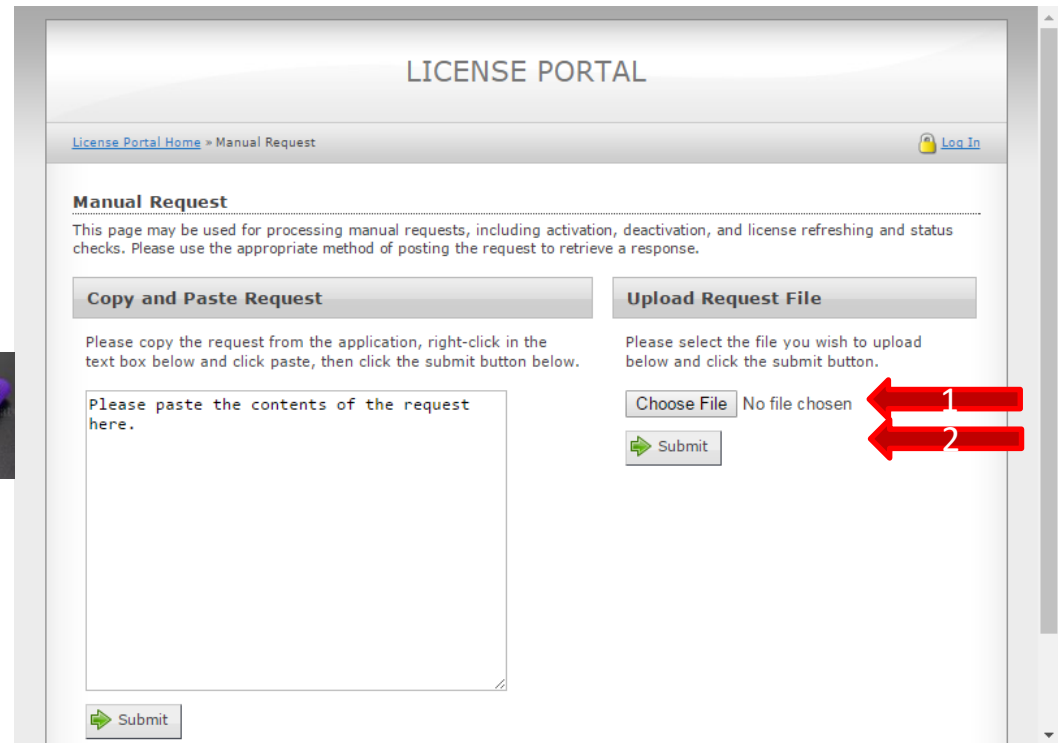

LICENSE PORTAL

[License Portal Home](#) > Manual Request [Log In](#)

Manual Request

This page may be used for processing manual requests, including activation, deactivation, and license refreshing and status checks. Please use the appropriate method of posting the request to retrieve a response.

Copy and Paste Request

Please copy the request from the application, right-click in the text box below and click paste, then click the submit button below.

Please paste the contents of the request here.

Upload Request File


Please select the file you wish to upload below and click the submit button.

No file chosen **1**

2

Installing TSG 8 QC – licence activation response (2 / 3)

- The web page changes
- 3. Click **“Download”**
 - A file **response.xml** is downloaded to your web browser’s default download directory
 - Copy **response.xml** to the memory stick

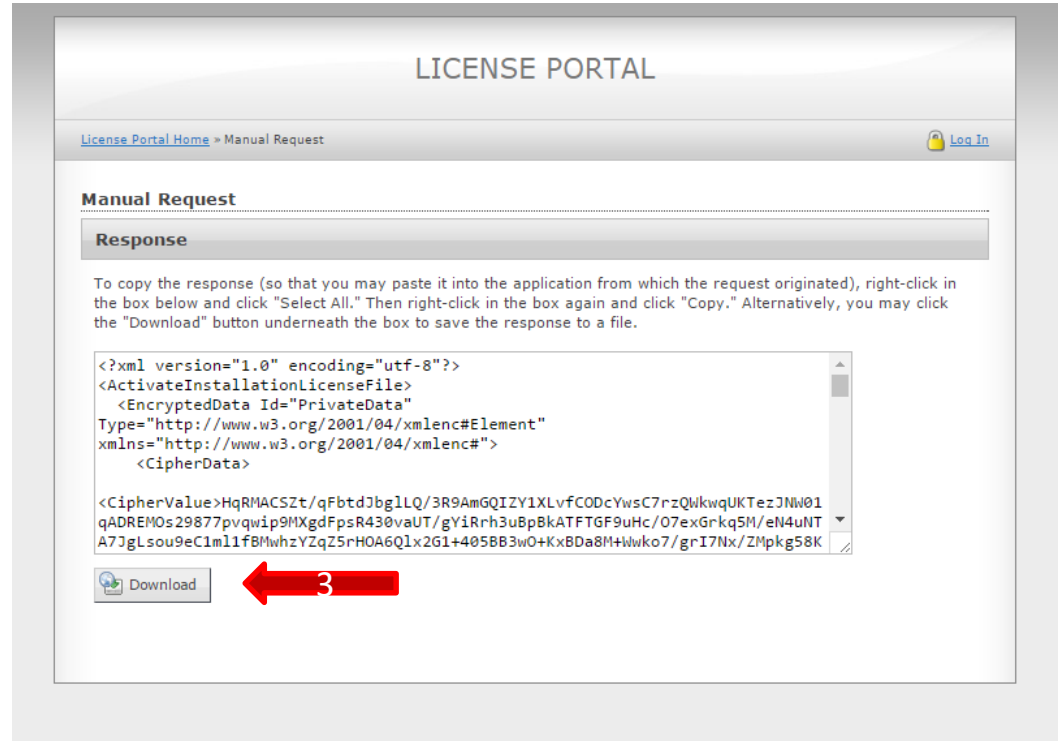

LICENSE PORTAL

[License Portal Home](#) » [Manual Request](#) Log In



Manual Request

Response

To copy the response (so that you may paste it into the application from which the request originated), right-click in the box below and click "Select All." Then right-click in the box again and click "Copy." Alternatively, you may click the "Download" button underneath the box to save the response to a file.


```
<?xml version="1.0" encoding="utf-8"?>
<ActivateInstallationLicenseFile>
  <EncryptedData Id="PrivateData"
Type="http://www.w3.org/2001/04/xmlenc#Element"
xmlns="http://www.w3.org/2001/04/xmlenc#">
  <CipherData>

<CipherValue>HqRMACSZt/qFbtdJbg1lQ/3R9AmGQIZY1XLvFCODcYwsC7rzQhkwqUKTezJNW01
qADREMOs29877pvqwip9MXgdFpsR430vaUT/gYiRrh3u8pBkATFTGF9uHc/07exGrkq5H/eN4uNT
A7JgLsou9eC1m11fBMwhzYZqZ5rH0A6Q1x2G1+405BB3w0+KxBDa8M+Hwko7/grI7Nx/ZMpk58K
```

Installing TSG 8 QC – licence activation response (3 / 3)

- Register the response file
 - Take the memory stick back to the HyLogger PC and plug it in
 - If you closed TSG, start it again and take it to where we left off on page 3
 - (Yes the button colours are different to when we started)
 - Click “**Register the response file**”
 - Windows asks you to select a file
 - Give it **response.xml** on the memory stick
 - TSG tells you that it will close, and be licensed the next time it is started

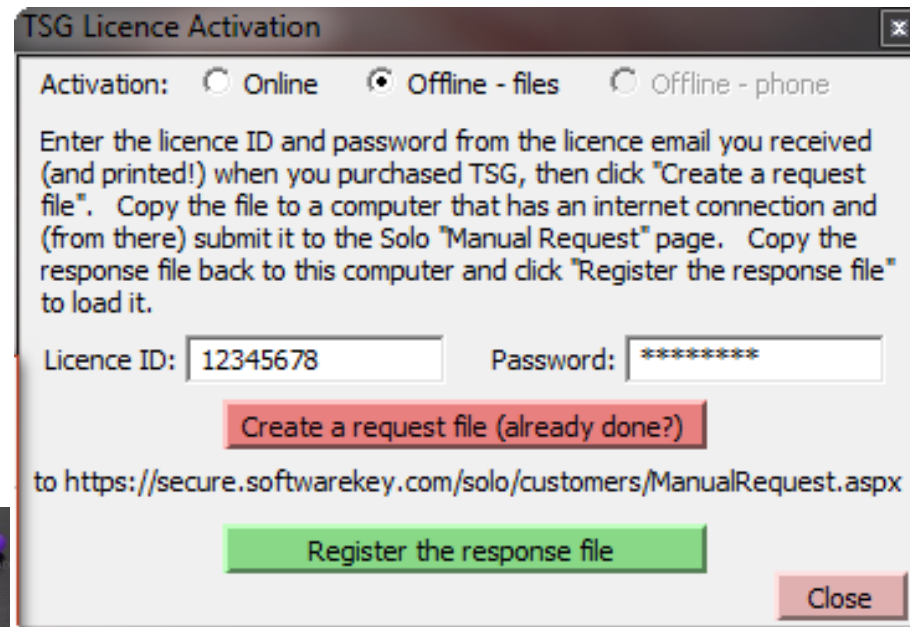

The screenshot shows a dialog box titled "TSG Licence Activation". It has three radio buttons for activation: "Online", "Offline - files" (which is selected), and "Offline - phone". Below the radio buttons is a paragraph of instructions: "Enter the licence ID and password from the licence email you received (and printed!) when you purchased TSG, then click 'Create a request file'. Copy the file to a computer that has an internet connection and (from there) submit it to the Solo 'Manual Request' page. Copy the response file back to this computer and click 'Register the response file' to load it." There are two input fields: "Licence ID:" with the value "12345678" and "Password:" with the value "*****". Below these fields is a red button labeled "Create a request file (already done?)". Underneath that is a URL: "to https://secure.softwarekey.com/solo/customers/ManualRequest.aspx". At the bottom of the dialog is a large green button labeled "Register the response file" and a small red button labeled "Close".